


## 1 CV COOLING WITH REHEAT SCALE: NONE

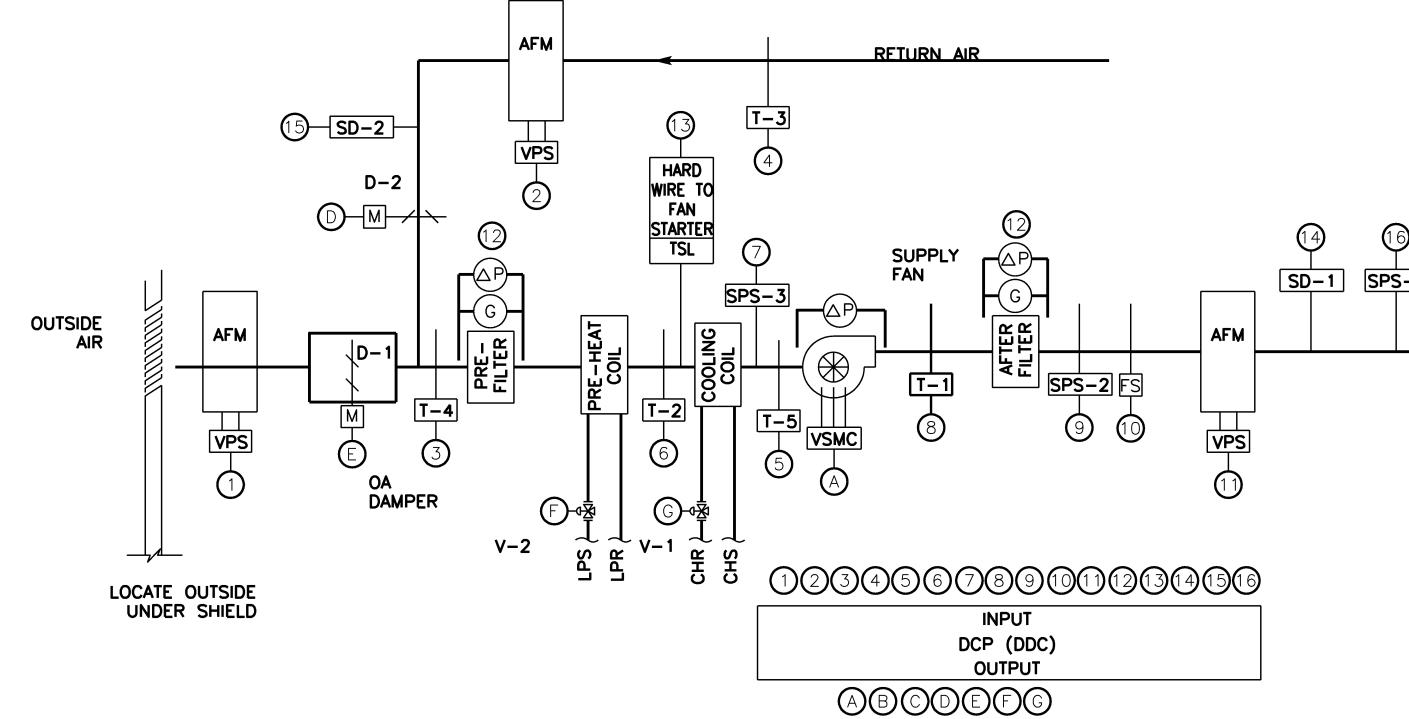

# (3) AIR HANDLING UNIT W/PRE-HEAT COIL CONTROL DIAGRAM - 11-AHU1

## HWS HWR HEATING MINIMUM ROOM TEMPERATURE ('F) $\longrightarrow$ VAV BOX CONTROL SEQUENCE W/DEADBAND

A. SET POINTS SHALL BE SET AS FOLLOWS: COOLING 75°F (ADJ) HEATING 70°F(ADJ) DEADBAND OF 5° F BETWEEN HEATING AND

COOLING SET POINTS WILL BE MAINTAINED. B. UPON FALL IN SPACE TEMPERATURE THE VAV DAMPER WILL MODULATE TO MINIMUM POSITION. C. UPON FURTHER DROP IN SPACE, HOT WATER VALVE V-1 WILL MODULATE

ADJUSTABLE TOLERANCE OF ± .5° F IS SELECTED TO PREVENT VALVE HUNTING D. IF ADDITIONAL HEAT IS NEEDED TO MAINTAIN SETPOINT, THE VAV DANMPER WILL MODULATE FROM MINIMUM AIRFLOW TO FULLY OPEN WITH TEH HOT WATER VALVE

TO MAINTAIN SET POINT ± .5° F. THE

\_\_\_\_ ATU CONTROLLER ROOM THERMOSTAT/SENSOR TE WALL MOUNTED 48" [1200mm] AFF.

E. THE REVERSE SHALL OCCUR ON THE RISE IN SPACE TEMPERATURE.

### V-1 IN FULLY OPEN POSITION. 2 VAV COOLING WITH REHEAT SCALE: NONE

JOB: 0555.09 BUILDING: VA SAMPLE POINTS LIST			POINT		SYSTEM OUTPUTS				SYSTEM INPUTS					SYSTEM SOFTWARE/CONTROL							PAC	PAGE:										
				LEGEND			BINARY ANA-		<b>\</b> -	BINARY			ANALOG			ALARM PROCESSING			APPLICATION/FUNCTION													
SYSTEM:				•	<i></i>	<b>3</b> /	7	<i>77</i>	777	77	///	7/	7	//	<b>77</b>	77	77	7/	7/	///	//	7/	7	<b>1</b> &		71		//		///	//	
VAV AIR HANDLER						[//	///	//			/	\$//		//		[][	///	///		//	//		//.									
		/ /					//							//			///			//			<b> </b> <u> </u>		Z		//			<b>]</b> /		
			•	S																//			k f									
	/ 5			Ø									\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	R											STO		Š			/		
SYSTEM COMPONENT:	MOON	A A A A A A A A A A A A A A A A A A A																						No.						RE	MARKS	
Return air Temperature	AI – 1	RAT						•			•		П						П							П						
Return Air Flow (cfm)	Al-2	RAF						•											$\prod$			Ш				Ш		•				
Mixed Air Temperature	AI-3	MAT					$\coprod$	•			•		Ш		$\coprod$		Ш		$\prod$	Ш		Ш				$\coprod$		•				
Pre—Heat Temperature	AI-4	PHT					$\prod$	•		$\coprod$			Ш		Ш		$\prod$		$\prod$	Ш		Ш	Ш	$oldsymbol{ol}}}}}}}}}}}}}}$		Ш		•				
Cooiling Coil Temperature	AI-5	ССТ						•			•																					
Discharge Air Temperature	AI-6	DAT						•			•						Ш											•				
Discharge Static Pressure	AI-7	DASP						•						•										•				•				
Supply Air Flow (cfm)	AI-8	SAF						•																				•				
SUPPLY FAN STATUS	BI-1	SF-STS															Ш															
MIXED AIR LOW LIMIT	BI-2	TSL-1															Ш															
STATIC PRESSURE HIGH LIMIT	BI-3	SPS-2																										•				
SUPPLY FAN VSMC ALARM	BI-4	SF-ALA						•									Ш											•				
SUPPLY FAN VSMC	AO-1	SF-SPD																										<b>•</b> •	FU	LL C	NUMMC	VICATION
OUTSIDE AIR DAMPER, D-1	AO-2																											•				
RETURN AIR DAMPER, D-2	AO-3																Ш											•				
PRE-HEAT VALVE V-2		PHT-V1															Ш											•				
COOLING VALVE V-1		CLG-V1																										•				
SUPPLY FAN START/STOP	BO-1	SF-SST	Ш				Ш		Ш	Ц		Ш	Ш		Ш	$oldsymbol{oldsymbol{\sqcup}}$	Ш	Ш		┫		Ш	П		Ш	Ш						
					$\coprod$					$\prod$			Ш				Ш	Ш				П	Ш									
							$\prod$			$\coprod$			$\coprod$			$\prod$	Ш					Ш										
					$\prod$		$\prod$			Ш			Ш				$\prod$					Ш	Ш			Ш						
							$\prod$						Ш									Ш										
							$\coprod$						П									Ш										
							$\prod$					Ш	П			Ш	Ш					Ш	$\coprod$									
			П				$\Box$	T		П			П				П									П						

POINTS LIST FOR VAV AIR HANDLING UNIT WITH MINIMUM OUTSIDE AIR

### SEQUENCE OF OPERATION FOR VARIABLE AIR VOLUME AIR HANDLING UNIT

#### 1. GENERAL

1.1 UNIT IS NORMALLY STARTED AND STOPPED REMOTELY AT THE ECC. H-O-A SWITCH SHALL BE KEPT IN THE "AUTO" POSITION. "HAND" AND "OFF" POSITIONS SHALL BE USED ONLY FOR MAINTENANCE. WHEN THE UNIT IS "OFF" D-1 AND D-3 SHALL BE FULLY CLOSED. WHEN THE UNIT IS "ON" D-2 SHALL BE FULLY OPEN.

1.2 A DAMPER END SWITCH ON D-3 SHALL PREVENT FAN FROM STARTING UNTIL DAMPER IS FULLY OPEN. 2. <u>TEMPERATURE CONTROL</u>

2.1 SUPPLY AIR TEMPERATURE, SENSED BY T-1, SHALL BE MAINTAINED AT SETPOINT VIA DIGITAL CONTROL PANEL BY MODULATING V-10R V-2 IN SEQUENCE TO MAINTAIN 54° SUPPLY AIR TEMPERATURE.

#### 3. AIR FLOW CONTROL

12/19/11

. 3.1 THE SUPPLY AIR FLOW SHALL BE CONTROLLED BY THE DIGITAL CONTROL PANEL MODULATING THE SUPPLY FAN VARIABLE SPEED MOTOR CONTROLLER TO MAINTAIN 1.0" [25mm] OF DUCT STATIC PRESSURE (FIELD ADJUSTABLE), SENSED BY SPS-1. RESET STATIC PRESSURE BASED ON ACTUAL BUILDING LOAD BY

3.2 USING HIGH PRESSURE SENSOR SPS-2 LOCATED AT THE SUPPLY FAN DISCHARGE, PREVENT THE SUPPLY FAN FROM DEVELOPING OVER 3" [75mm] OF STATIC PRESSURE (FIELD ADJUSTABLE). IF STATIC PRESSURE AT SPS-2 DOES EXCEED 3" [75mm] THE SUPPLY AIR FAN SHALL STOP. SPS-2 SHALL BE HARDWIRED TO THE SUPPLY FAN VSMC AND UNIT SHALL BE SHUTDOWN IN HAND, AUTO OR BYPASS MODE. SPS-2 WILL REQUIRE MANUAL RESET AT THE DEVICE TO START SUPPLY FAN.

#### 4. FREEZE PROTECTION

. 4.1 IF THE AIR TEMPERATURE AS SENSED BY T-3 FALLS BELOW 45°F [7°C], AN ALARM SIGNAL SHALL INDICATE AT THE DCP AND ECC. IF THIS TEMPERATURE FALLS BELOW 40°F [4.4°C], AS SENSED BY THE TSL THE SUPPLY FAN SHALL SHUT DOWN AND A CRITICAL ALARM SHALL INDICATE AT THE DIGITAL CONTROL PANEL AND ECC. TSL SHALL BE HARDWIRED TO THE SUPPLY FAN UFD AND UNIT SHALL BE SHUTDOWN IN HAND, AUTO OR BYPASS MODE. TSL WILL REQUIRE MANUAL RESET AT THE DEVICE TO START SUPPLY FAN.

#### 5. AUTOMATIC SHUTDOWN/RESTART

WHEN SMOKE IS DETECTED BY DUCT SMOKE DETECTOR, SD-1, THE SUPPLY FAN SHALL SHUT "OFF" AND AN ALARM SIGNAL SHALL BE TRANSMITTED TO THE FIRE ALARM SYSTEM. ALL SMOKE DAMPERS IN THE SUPPLY AND RETURN DUCTS SHALL CLOSE.

EXHAUST FANS SERVING AREA OF THE SUPPLY FAN SHALL CONTINUE TO RUN. SUPPLY AND RETURN FANS SHALL RESTART AND SMOKE DAMPERS SHALL OPEN WHEN FIRE ALARM CIRCUIT IS RESET.

UPON ACTIVATION OF THE FIRE ALARM SYSTEM IN ANY AREA SERVED BY 11-AHU-1, OR UPON SHUTDOWN OF THE SUPPLY FAN, ALL FIRE/SMOKE DAMPERS SHALL CLOSE. SMOKE DAMPERS SHALL OPEN PRIOR TO STARTING SUPPLY FAN TO RESUM ENORMAL OPERATION.

#### 6. EMERGENCY CONSTANT SPEED OPERATION

UPON FAILURE OF THE VSMC, THE SUPPLY FAN SHALL BE STARTED/STOPPED MANUALLY AT THE DIGITAL CONTROL PANEL OR THE ECC THROUGH THE BY-PASS STARTER. FANS SHALL THEN BE OPERATED AT CONSTANT SPEED.

CONTROL IDENTIFICATION												
DEVICE DESIGNATION	DESCRIPTION	FUNCTION										
G	PRESSURE GAUGE	FILTER CONDITION INDICATOR										
SPS-1	STATIC PRESSURE SENSOR (SEE FLOOR PLANS FOR LOCATION)	SENSES AND TRANSMITS DUCT STATIC PRESSURE TO DCP.										
SPS-2 SPS-3	HIGH LIMIT STATIC PRESSURE SENSOR	SENSES AND TRANSMITS DUCTSTATIC PRESSURE NEAR AHU TO DCP.										
T-1	SUPPLY AIR TEMPERATURE SENSOR	SENSES AND TRANSMITS SUPPLY AIR DRY BULB TEMPERATURE TO DCP FOR CONTROL AND INDICATION.										
T-2	LEAVING PRE-HEAT COIL AIR TEMPERATURE SENSOR	SENSES AND TRANSMITS PRE-HEAT COIL DRY BULB TEMPERATURE TO DCP FOR ONTROL AND INDICATION										
T-3	RETURN AIR TEMPERATURE SENSOR	SENSES AND TRANSMITS RETURN AIR DRY BULB TEMPERATURE TO DCP FOR INDICATION ONLY.										
T-4	MIXED AIR TEMPERATURE SENSOR	SENSES AND TRANSMITS MIXED AIR DRY BULB TEMPERATURE TO DCP FOR INDICATION ONLY.										
T-5	LEAVING COOLING COIL AIR TEMPERATURE SENSOR	SENSES AND TRANSMITS COOLING COIL DRY BULB TEMPERATURE TO DCP FOR INDICATION ONLY.										
V-1	CHILLED WATER CONTROL VALVE STRAIGHT THROUGH MODULATING TYPE	PROPORTIONS FLOW OF CHILLED WATER TO COOLING COIL IN RESPONSE TP DCP.										
V-2	STEAM CONTROL VALVE STRAIGHT THUR MODULATING TYPE	PROPORTIONS FLOW OF STEAM TO PRE-HEAT COIL IN RESPONSE TP DCP.										
VPS	VELOCITY PRESSURE SENSOR	SENSES AND TRANSMITS VELOCITY PRESSURE TO DPC.										
VSMC	VARIABLE SPEED MOTOR CONTROLLER WITH MOTOR STARTER	CONTROLS SUPPLY AND RETURN FANS MOTOR SPEED IN RESPONSE TO DCP.										
AFM	AIR FLOW MEASURING DEVICE	MONITORS AIR FLOW RATE PROVIDES VELOCITY PRESSURE FOR TRANSMITTAL TO DCP.										
DP	DIFFERENTIAL PRESSURE SENSOR	TRANSMITS DIFFERENTIAL PRESSURE TO DCP TO INDICATE FILTER CONDITIONS AND STATUS OF FANS.										
DCP	DISTRIBUTED CONTROL PANEL	CONTROLS OPERATION OF AIR HANDLING UNIT IN ACCORDANCE WITH THE SEQUENCE OF OPERATION										
D-1	OUTSIDE AIR DAMPER 2 - POSITION	OPENS WHEN SUPPLY FAN STARTS AND CLOSES WHEN SUPPLY FAN STOPS.										
D-2	RETURN AIR DAMPER MODULATING	PROPORTIONS FLOW OF RETURN AIR IN RESPONSE TO DCP.										
FS	DUCT SMOKE DETECTORS (FURNISHED AND WIRED TO FIRE ALARM PANEL BY ELECTRICAL)	PROVIDE SMOKE SIGNAL TO DCP.										
TSL	LOW LIMIT TEMPERATURE SENSOR, EXTENDED ELEMENT, SERPENTINE WRAP TO FULLY SENSE TEMPERATURE	LOCATE AT ENTERING FACE OF COOLING COIL. MANUAL RESET TYPE.										
SD-1 SD-2	DUCT MOUNTED SUPPLY AND RETURN AIR SMOKE DETECTOR	INTERLOCK WITH FIRE ALARM SYSTEM TO SHUT DOWN FAN UPON ACTIVATION										

CONTROL IDENTIFICATION

"ISSUED FOR BIDS" - FULLY SPRINKLERED Project Title Project Number 674A4-CSI-516 Drawing Title SCHEMATIC DESIGN SUBMISSION 08/02/10 CONSULTANTS: ARCHITECT/ENGINEERS: Office of 09/03/10 DESIGN DEVELOPMENT SUBMISSION AIR FLOW DIAGRAM, TEMPERATURE BUILDING 11 ADDITION AND CONSTRUCTION DOCUMENT SUBMISSION 11/22/10

> MEP ENGINEERS Burns, DeLatte & McCoy, Inc. Texas Registered Engineering Firm F-685 FIRE PROTECTION ENGINEERS CIVIL ENGINEERS

WILSON ARCHITECTURAL GROUP PINNACLE STRUCTURAL STRUCTURAL ENGINEERS

NOT TO SCALE

BURNS DELATTE AND McCOY, INC. PROTECTION DEVELOPMENT INC. BREWER AND ESCALANTE

CONTROL DIAGRAM AND SEQUENCE OF OPERATION Approved: Project Director Location

INTERIOR RENOVATIONS **Building Number** Drawing Number WACO, TEXAS Checked 19 DEC 2011 JKL Dwg.

Construction and Facilities Management

Department of Veterans Affairs

ISSUE FOR BIDS

VA FORM 08-623

orie eignth inch = one fc